Loading and Unloading Exclusion Zones



1/ Exclusion Zones - areas around working machinery that are dangerous to people.

FCN has various types of machinery that are dangerous to be near, these are just a few.



2/ Where Can | Go?

The colour coding system below shows zones allowed to be accessed and NO-GO areas

Green Zone - SAFE Driver Safe Drivers or others can be seen and can see Waiting Everyone is clear of potential falling items Area as Marked **Amber Zone - Caution** These zones can be accessed with caution - Machinery Turned OFF Care when approach/depart Safe Waiting **Red Zone - Danger Exclusion** Never be in these zones STAY 5 metres AWAY High risk of death or serious injury in these RED zones 5m All Round Approach after positive contact with operator Assist as Required eg straps etc Driver **DANGER NO GO 5 metres minimum** Movement **NEVER** GO **HERE**

3/ Machinery Types - The above is loading/unloading a semi-trailer, other types of machinery have the same concept but varying distances

 
DANGER NO GO Opposite Side 5 metres minimum

25 Metres Minimum



Mobile Plant with Poor Operator Vision

1 Metre Minimum

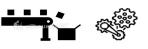

Equipment with Rotaing Parts